



Simple switch from **Down Flow** to **Up Flow** version.

1 – Return the injector seal

Down flow

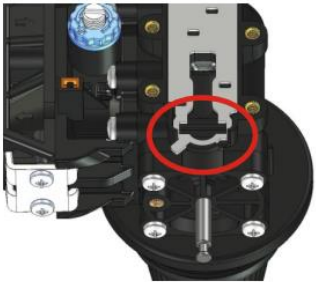

Up flow

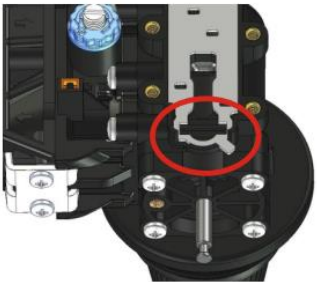

2 – Reverse the piston

Down Flow :



Up Flow :



3 – Change the programming and the cycle times

Settings at 23h45
Press ► for 8 seconds
Display : ME-1 or ME-2 or ME-3 or ME-4

SETTING	 	DISPLAY	DESCRIPTION
Regeneration mode		r--1	Time control & weekly
Regeneration flow type		t-dF	Down Flow
		t-uF	Up Flow