



MANAGE MY SOFTENER

SALT ALARM
PALLAS

SALT ALARM PALLAS

This unit has a calculated salt alarm. Each time the softener regenerates, the control valve will deduct a fixed amount of salt. This amount is determined by your regeneration settings. If a salt alarm has been triggered, it means that your softener has reached a salt level that is below the minimum setting in the unit and it is now time to refill the salt container. Here is how to proceed:

1 Please refill the container with salt.

2 Enter the valve programming and fill in the level of salt in the container in kg. To do so, go to the control valve and press **next** until you see the following **check salt level** screen. This screen will be alternating with the **salt level** display.

CHECK SALT LEVEL

SALT LEVEL

SET

\\\\\\\\\\\\\\\\\\\\\\
5 KG
\\\\\\\\\\\\\\\\\\\\\\

3 Now press **clock**. The letters on the screen will start blinking. You set a new salt level by using the arrows **up** and **down** and pressing **next** to set. Please note that you should set the total level of salt in the container, not just the amount that you added.

4 If you would like to change the trigger point for the salt alarm (the minimum salt level), then you will have to go deeper into the valve programming. To do so, please press the combination of **next** + **down** and hold for three seconds. You will see the following screen:

\\\\\\\\\\\\\\\\\\\\\\
SOFTENING
\\\\\\\\\\\\\\\\\\\\\\

SET

TYPE

5 Press **next** until you reach the very last screen. Now you can adjust the **salt level alarm** by pressing the arrows **up** or **down**.

SALT LEVEL ALARM

SET

\\\\\\\\\\\\\\\\\\\\\\
OFF
\\\\\\\\\\\\\\\\\\\\\\