




Press 3 seconds to see current flow

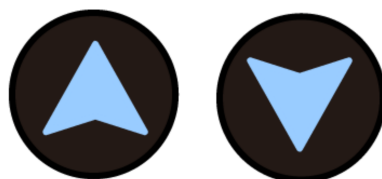

Press 3 seconds to enter advanced query mode



Current Flow

Press again to return to service display



Firmware version



Peak flow



Total flow after installation



Total hours in service after installation




Total regeneration after installation




Interval hours between last 2 regenerations



Hours since last regeneration

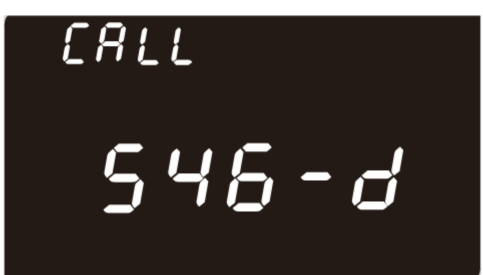

Remaining days until maintenance

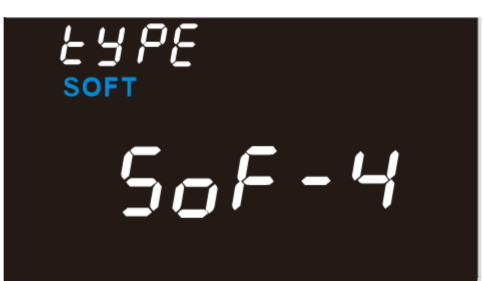

Control valve regeneration mode



Duplex Mode display (only when duplex is selected)