
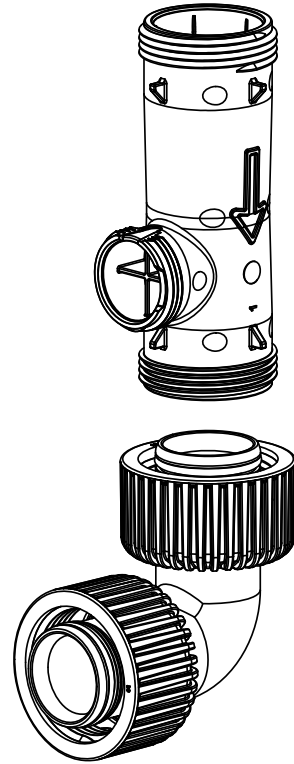


WS1.5PB COMPOSITE METER INSTALLATION GUIDE

V3045QC-PB90 • WS15PB QC METER KIT ELBOW
V3045QC-PB • WS15PB QC METER KIT STRAIGHT



INLET Remote Blank Meter Fitting Installation:

1. Install the QC x QC fitting on the outlet of the remote blank meter or in front of the arrow.
2. Connect other side of fitting to WS1.5PB control valve Inlet.

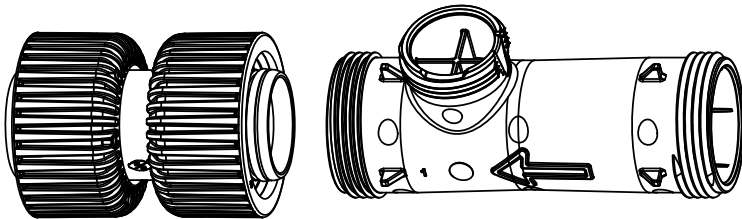

OUTLET Remote Meter Fitting Installation:

1. Install the QC x QC fitting on the inlet of the meter or opposite of the arrow.
2. Connect other side of fitting to WS1.5PB control valve outlet.

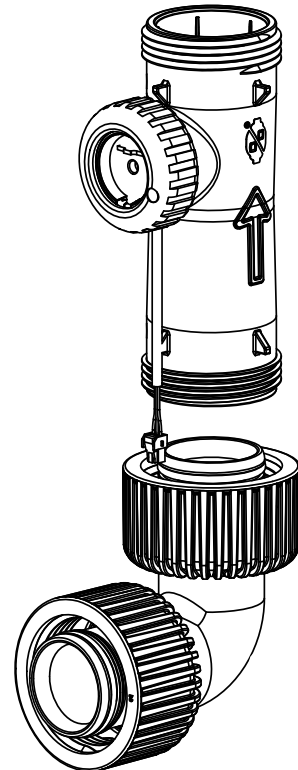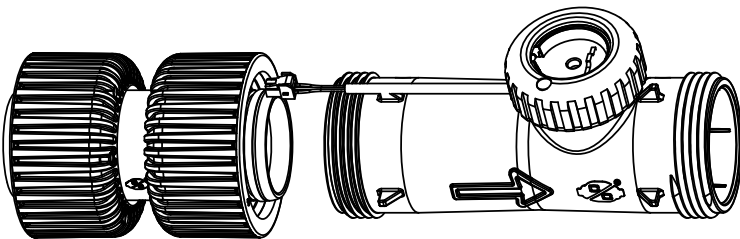

See back page for dimensions.

WS1.5PB WITH COMPOSITE METER DIMENSIONS

